






Remote Controller (RC-29)

The Remote Controller is used to arm the system in home or away mode, disarm the system and send a panic signal.

● Identifying the parts

-  **1. AWAY ARM BUTTON**
Press this button to arm the system in away mode.
-  **2. PANIC BUTTON**
Press and hold this button for 3 seconds to send a panic signal regardless of system mode.
-  **3. DISARM BUTTON**
Press this button to disarm the system. When alarm is activated, pressing this button will stop the alarm.
-  **4. HOME ARM BUTTON**
Pressing this button will arm the system in home mode.

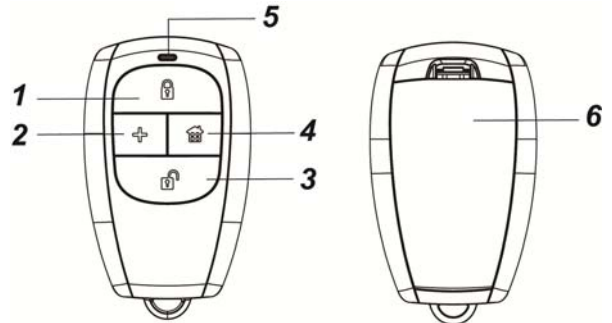

<NOTE>

- ☞ Panic alarm cannot be stopped after activation by pressing disarm button on Remote Controller.

5. LED INDICATOR

The LED will light on for 2 seconds when the Away Arm/Home Arm/Disarm button is pressed.
When the Panic Button is pressed, the LED will quickly flash 6 times.

6. BATTERY COMPARTMENT

The Remote Controller uses one CR2032 3V lithium battery as its power source. The low battery status will be sent to the Control Panel along with regular signal transmission, and, the Control Panel will display the status accordingly.

<NOTE>

- ☞ When changing battery, after removing the old battery, press any button twice to fully discharge before inserting a new battery.
- ☞ When a low voltage battery is inserted, the LED will flash 3 times to indicate low battery.

● Getting Started

- Remove the battery cover and insert the battery.
- Put the Control Panel into learning mode, refer to Control Panel manual for detail.
- Press any buttons on the Remote Controller.
- If the Control Panel receives the Remote Controller signal successfully, it will display the information accordingly.
- Please refer to your Control Panel manual to complete the learning process.